

Assembly Instruction A/C

Type MWH 09 CRN2



A/C unit



A/C support (2 pc of braces and 1 pc of flat support per A/C unit)



A/C frame without A/C support



Removal of packaging



Take off front cover



Remove filter



Remove fixing screws of front of unit



Lift up front part of unit



Unplug connectors



Take off front part of unit



Take off fixing clamps on front of unit



Remove A/C from case



Position A/C support




Insert case



Position A/C case (case should be positioned 22cm to the inside of the container according to the drawing on page 4)



Case and support is bolted to the frame (case-internal dimension 26 cm)

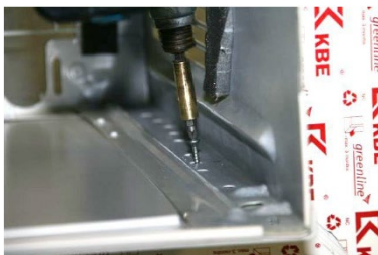

Bolt all parts to the A/C



Position the A/C case at the top part of the frame (case should stick into the inside of the building by 21.5 cm from frame)




Take care of angle (1° to 2° to the outside)



Bolt A/C case to frame



Drill and bolt braces to A/C support

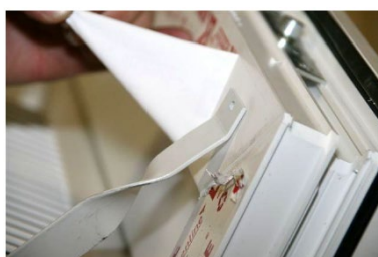


Bolt 2 braces on the left and right side to the frame



Use silicone to seal up the A/C case on all 4 sides of the frame



A/C unit fitted to the frame and ready for positioning

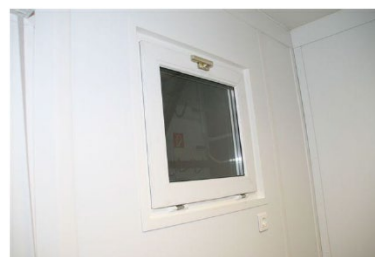




Take apart window fitting



Removal of hinge covers

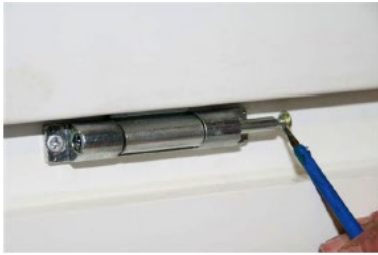

Removal of hinge bolts



Remove glazed frame



Insert A/C frame



Insert hinge bolts




Fix window fitting



Refit hinge cover



Fit window handle

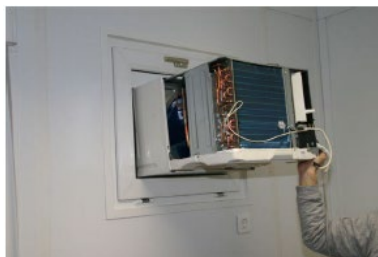

Insert A/C unit into case



Fit fixing clamps



Reconnect plugs



Insert front of unit



Bolt front of unit



Insert filter



Insert front cover



Fit condenser pipe to the outside



Sketch

